




ConfeoPremix

**CONFEO PREMIX
CONDENSING COMBI BOILER**

CONFEO PREMIX P 14/20/24/28/30/35 HM/HCH/HST

**OPERATING &
INSTALLATION MANUAL**

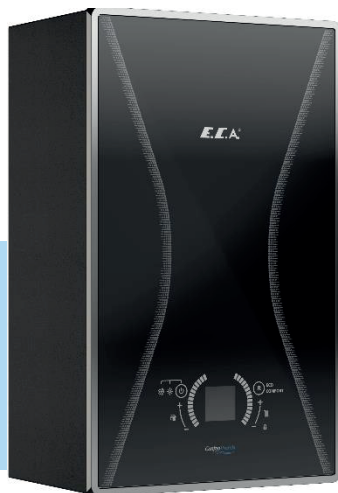

1 – INTRODUCTION.....	5
2- GUARANTEE AND SERVICE.....	5
3- DEFINITIONS OF SYMBOLS.....	5
4- SAFETY RULES AND WARNINGS.....	6
4.1- Safety Instructions.....	6
4.2- Water Systems & Gas Supply Line.....	6
4.3- Installation.....	6
4.4- Boiler Start Up.....	6
4.5 - Usage and Maintenance.....	7
5- PRODUCT.....	8
5.1- General Specifications.....	8
5.2- Notations of Product.....	8
5.3- Detailed View and List of Components.....	9
5.4- Technical Specifications.....	11
5.5- Electrical Diagram.....	13
6- BOILER PACKAGING.....	14
7- FLUES.....	15
7.1- Flue Sizes.....	15
7.2- Flue Types.....	15
7.3- Distances for Placement of Flues.....	16
8- INSTALLATION.....	17
8.1- Selection of Installation Location of Device.....	17
8.2- Independent Operation from Ambient Air (Type C).....	18
8.3-Mounting the Boiler.....	18
9- CONNECTIONS.....	19
9.1- Condensate Discharge Connection.....	19
9.2- Gas and Water Connections.....	20
9.3- Electrical Connection.....	22
9.4- Room Thermostat.....	23
9.5- Outdoor Temperature Sensor.....	24
9.6- Room Thermostat and Outdoor Temperature Sensor Connection.....	25
10- COMMISSIONING, USE AND TURNING OFF THE BOILER.....	26

10.1- Commissioning, Filling Water into Boiler and Heater Installation.....	26
10.2- Using the Device.....	27
11- CONTROL PANEL.....	27
11.1- Icons of Buttons.....	27
11.2- LCD Screen.....	29
11.3- Operation Functions.....	30
12- ERROR CODES AND DESCRIPTIONS.....	31
13- USEFUL INFORMATION ON PRODUCT.....	35
13.1- Information on the Efficient Use of the Combi Boiler in Terms of Safety and Energy Consumption.....	35
13.2- Clogging in Installation.....	35
13.3- Cleaning of Boiler.....	35
14- ANNEXES.....	36
14.1- Circulation Pump Head/Flow Graph.....	36
15- INSTALLATION TEMPLATE.....	37
15.1- HM Model.....	37
15.2- HCH Model.....	38
15.3- HST Model.....	39
16- PRODUCT FICHES AND PACKAGE LABEL CALCULATIONS.....	40
16.1-PRODUCT FICHES.....	40

1- INTRODUCTION

First of all, we would like to thank you for choosing E.C.A brand. E.C.A. Confeo Premix condensing boilers have been designed for an efficient, safe and comfortable central heating and hot water requirement. The Confeo Premix condensing boilers can possibly use natural gas and LPG (G31-propane) according to the desired fuel preference.

HM Model: It is designed for both Central Heating (CH) and Domestic Hot Water (DHW).

HCH Model: It is designed for Central Heating (CH).

HST Model: It is designed for both Central Heating (CH) and Domestic Hot Water (DHW). Boiler connection must be used for Domestic Hot Water (DHW) requirement.

The assembly and usage information of 14-20-24-28-30-35 kW Confeo Premix condensing boilers are available in this manual. Detailed information have been provided in the guide regarding the technical specifications of the devices, selection of the boiler location, fitting its water, gas, flue and electric supply connections, maintenance information and resolution solving of possible failures. Please carefully read the manual in order to benefit from all the features of your device. Keep all the documents provided by your device in order to refer when required.

2- GUARANTEE AND SERVICE

- The appliance has guarantee period against faulty workmanship or material in condition that the instructions and precautions in this manual must be obeyed. The service operations and general maintenance must be carried out only qualified person.
- The warranty certificate must be registered by Service in the installation day.
- Your appliance needs not any repairs if operated according to this manual. For assistance for additional information, consult qualified person, installer or gas supplier.

3- DEFINITIONS OF SYMBOLS

The following symbols have been placed at required points in the text in order to draw attention to significant points regarding the usage and assembly of the device. The meaning of symbols have been specified below.



Indicates that the situation that can only be interfered by qualified person.



Explanations containing information that should be considered by the user.



CAUTION: It means that you may suffer from material damage or slight personal injury.

DANGER: It means that you may suffer from sever personal injury.

4- SAFETY RULES AND WARNINGS

4.1- Safety Instructions

- When a gas leak is found or suspected;
- Turn off the gas valve of the boiler and the valves of all other devices operating with gas.
- Shut off the stove, oven and similar appliances to put their flame out.
- Do not light matches, lighter etc, and stub out your cigarette.
- Ventilate the environment by opening doors and windows.
- Do not ever touch the buttons and plugs of your electrical appliances.
- Turn off the gas valves in the apartment and building entrance.
- Do not use the phones at places where the gas leak is suspected.
- Call your qualified person as soon as possible.
- Do not place and use flammable and explosive liquid or materials around the boiler.
- Keep materials such as water, foam away from electrical connections during operations such as cleaning, gas leak test etc.
- Do not lay the LPG container down
- Do not block air vents, openings made in the walls of the room which provide fresh air to the installation room.

4.2- Water Systems & Gas Supply Line

Before installation of the boiler, the water systems (CH & DHW circuit) and gas supply line must be completed in accordance with the relevant regulations and standards by user.

4.3- Installation

- The boiler must be installed in accordance with national and local requirements, gas safety regulations, relevant standards and this manual by qualified installer.
- The appliance should be mounted against a closed wall.
- The appliance should not be positioned having direct contact to steam, detergent or gases.
- Any change of flue position must not be made without consulting qualified person.
- Sunlight can cause color change on the exterior of your device over time.
- The device must be installed in indoor spaces under normal conditions. However, it can be operated in a suitable cabinet in places such as garage, open balcony. Please consult E.C.A for proper cabinet sizes.
- If device is located in an unheated area, it should be connected to mains, switched on, and pressure of installation should be within operation range so that freeze protection is activated. Even if device is OFF position, freeze protection stays activated.
- Be careful due to the fact that the front panel is glass during the assembly of the device, pointed / piercing etc. Care should be taken that objects do not hit the windshield panel.

4.4- Boiler Start Up

- If the user requests gas conversion after purchasing the device, this process is subject to a fee.
- Gas conversion should be done by an authorized service. Gas leakage test must be done after conversion. Boiler start up must be performed certainly by qualified person.

- Gas Type (Natural Gas or LPG), gas supply pressure (mbar), maximum DHW operating water pressure (bar) and electricity supply voltage on the information plate must be suitable with mains supply conditions. This is checked by qualified person.
- After boiler start up, you should request information about operating the boiler and safety precautions from qualified person.



CAUTION: The 2-amp bipolar fuse with a minimum contact opening of 3 mm must be used in the electrical connection of the boiler.

4.5 - Usage and Maintenance

Read carefully instructions and precautions in this manual against wrong usage which causes unsafe conditions.

The boiler should be checked and serviced for general maintenance once a year. Maintenance and service operations must be carried out only qualified person.

Only a damp cloth should be used for cleaning the outer surface of the boiler and then the surfaces should be dried completely. Do not use chemical substances or solutions which cause rust and scratches in your appliances.



CAUTION: This device is not intended to be used by persons with physical, sensory or mental disabilities (even children) or persons with inadequate experience and knowledge, unless the person responsible for the safety of the device provides supervision and management of the use of the device. Children must be kept under surveillance to ensure that they do not play with the device. Cleaning and user maintenance should not be done by unattended children.



CAUTION: This device is not intended for use by persons (including children) who are low physical or sensory and mental capacity and inexperienced persons without informing and supervising the use of the device by responsible persons. Ensure that children do not play with the appliance.



CAUTION: If device is used incorrectly or for other than its intended use, it may present a life hazard and may cause material damage to the product and its surroundings.



CAUTION: This device can be used by children 8 years of age and above, and people with a lack of physical, sensory or mental ability, or experience and knowledge, if they have been supervised or instructed to use it safely, and the dangers involved have been understood by them.

5- PRODUCT

5.1- General Specifications

Control panel is ergonomic and easy to use. The Confeo Premix condensing combi boiler with elegant glass touch panel and advanced LCD screen provides ease of use and service. On a LCD display with black instrument panel; you can see the operating state icons, heating and domestic hot water set temperature, water pressure level, failure codes and actions to be taken. With the safety systems available in your device, safety of both you and your device are fully ensured.

These safety systems;


- Flame Failure Safety System
- Boiler Over-Heat Safety System (95 ° C)
- DHW (Domestic Hot Water) Over-Heat System (71 ° C)
- High Water Pressure Protection System (3 bar)
- Low Water Pressure Protection System (0.4 bar)
- Low Voltage Protection System (170 VAC)
- Thermal Accumulation Protection System (with by-pass circuit and “pump over-run”)
- Frost Protection System (for both CH and DHW circuit)
- Domestic Hot Water Flow Control (only for HM Model)
- Pump Anti-sticking Function
- 3 Way Valve Anti-sticking Function (except HCH Model)
- Automatic Air Vent
- Expansion Vessel (8 liters)
- Protection System Against Penetration of Water Through Flue
- Maintenance Reminder Function (Yearly)
- Anti-legionella Protection (only for HST Model)
- Voice Alert System in Case of Error
- Child Lock
- Predictive Maintenance Features (In cases where there is a risk of error, giving warning before error occurs)

5.2- Notations of Product


NOTATION	DESCRIPTION
Confeo Premix P 14-20-24-28-30-35 kW HM	Confeo Premix P Hermetic Monotermic Condensing Boiler
Confeo Premix P 14-20-24-28-30-35 kW HCH	Confeo Premix P Hermetic Central Heating Condensing Boiler
Confeo Premix P 14-20-24-28-30-35 kW HST	Confeo Premix P Hermetic Storage Tank Condensing Boiler



5.3- Detailed View and List of Components

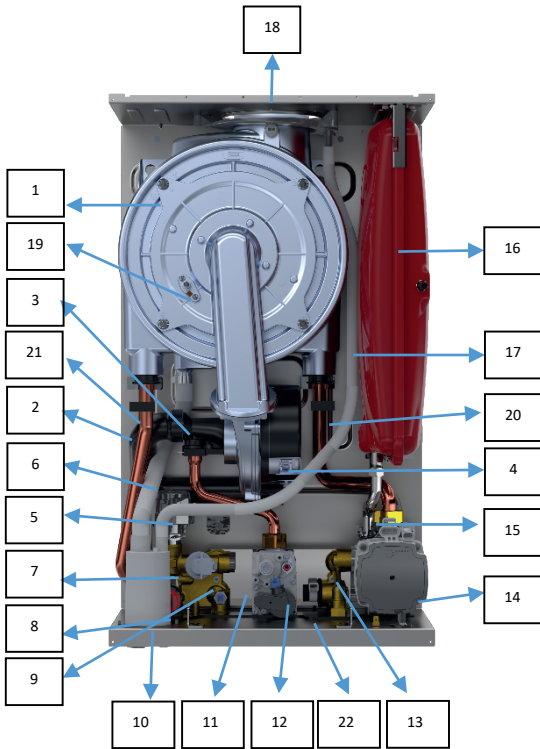


- 1- Main Exchanger
- 2- Silencer
- 3- Venturi
- 4- Fan
- 5- Motorized Valve
- 6- Condensing WaterHose
- 7- Outlet Manifold
- 8- 3 Bar Safety Valve
- 9- Pressure Sensor
- 10- Siphon
- 11- Plated Heat Exchanger
- 12- Gas Valve
- 13- Return Manifold
- 14- Pump
- 15- Flexible Connection Hose
- 16- Expansion Tank (8 liters)
- 17- Rainwater Hose
- 18- Rainwater Hood
- 19- Ignition Electrode
- 20- Return Temp. Sensor
- 21- Supply Temp. Sensor
- 22- DHW Flow Sensor
- 23- Mainboard Box
- 24- Front Glass Touch Panel

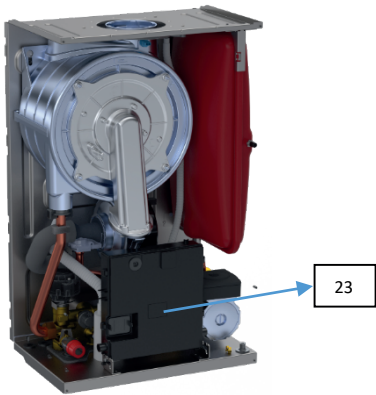

* Components may be different for some appliance models.


5.3.1 - HM Model

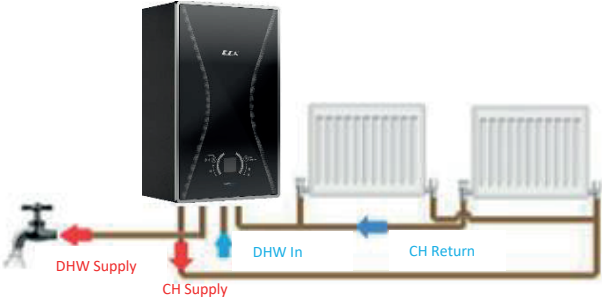

5.3.2 - HCH Model



5.3.3 - HST Model

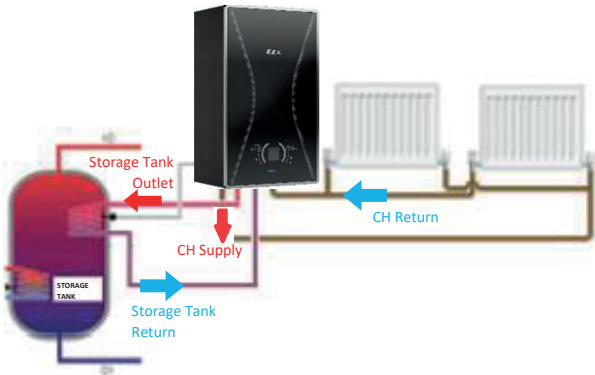


5.4 - Technical Specifications

Product type	Unit	CONFEO PREMIX P 14 HM-HCH-HST	CONFEO PREMIX P 20 HM-HCH-HST	CONFEO PREMIX P 24 HM-HCH-HST	CONFEO PREMIX P 28 HM-HCH-HST	CONFEO PREMIX P 30 HM-HCH-HST	CONFEO PREMIX P 35 HM-HCH-HST
Gas Category			I2H, I3P, I2Esi, I2E(S), I12I3P, I12H3P, I12ELL3P, I12Esi3P				
Flue Types			C13(X), C33(X), C43(X), C53(X), C63(X), C83(X), B23, B33				
Gas Input Pressure (G20)	mbar	20					
Gas Input Pressure (G31)	mbar	37/50					
Capacity-Efficiency							
CH Min. Heating power - (@60°C min)	kW	5,6	5,6	5,6	6,4	6,9	8
CH Max. Heating power - (@80/60°C) (P4)	kW	14,1	20,2	24,5	28	30	35
CH Min. Heating power - (@30°C min)	kW	6,7	6,7	6,7	7,7	8,3	9,6
CH Max. Heating power- (@50/30°C)	kW	15	22,2	26	29,6	31,7	37
CH Min. Heat input (Qn)	kW	6,2	6,2	6,2	7,2	7,7	9
CH Max. Heat input (Qn)	kW	14,5	20,7	25,2	28,7	30,8	35,9
DHW Max. Heat input (Qn)	kW	25,2	25,2	27,2	31,5	33,5	35,9
Efficiency (@80°/60° C Max) (Gross Calorific value)	%	97,50%	97,50%	97,50%	97,50%	97,50%	97,50%
Efficiency (30°C Return) (Gross Calorific value)	%	107,50%	107,50%	107,50%	107,50%	107,50%	107,50%
ERP Informations							
Seasonal Space Heating Energy Efficiency Class		A	A	A	A	A	A
Water Heating Energy Efficiency Class/ Load Profile		A/XL	A/XL	A/XL	A/XL	A/XL	A/XL
Rated Heat Output (Prated)	kW	14,1	20,2	24,5	28	30	35
Seasonal Space Heating Energy Efficiency	%	92	92,11	92,21	92,71	92,03	92,85
Water Heating Energy Efficiency	%	90,7	90,7	83,6	83,9	82,8	82,8
Sound Power Level	db(A)	44	46	47	49	50	52
Efficiency at Rated Heat Output At High Temperature Regime (η_{hs})	%	87,9	87,9	87,9	87,9	87,9	87,9
Efficiency at 30% of rated Output At Low Temperature Regime (η_{ls})	%	97,2	97,2	97,2	97,7	97,5	97,6
At Full Load e_{lmax}	kW	0,025	0,035	0,04	0,04	0,056	0,066
At Part Load e_{lmin}	kW	0,012	0,012	0,012	0,012	0,013	0,013
In standby Mode	kW	0,004	0,004	0,005	0,004	0,004	0,004
Standby Heat Loss	kW	0,065	0,065	0,065	0,065	0,065	0,065
Emissions of Nox Level (G20)	mg/kWh	33,35	38,06	32,27	21,29	37,4	25,05
Daily Electricity Consumption (Qelect)	kWh	0,2	0,2	0,21	0,22	0,24	0,212
Daily Fuel Consumption (Qfuel)	kWh	23,072	23,072	23,767	22,8	23,021	21,505
Gas Consumption							
Natural Gas (@Min-Max Capacity)	m ³ /h	0,65-1,53	0,65-2,2	0,65-2,65	0,75-3,02	0,81-3,25	0,94-3,79
LPG (@Min-Max Capacity)-Propane	kg/h	0,51-1,2	0,51-1,7	0,51-1,98	0,59-2,26	0,63-2,46	0,74-2,87
NO _x Class		6	6	6	6	6	6
Central Heating							
Min. Water Pressure	bar	0,4	0,4	0,4	0,4	0,4	0,4
Max. Water Pressure	bar	3	3	3	3	3	3
Operation Range (@Radiator heating)	°C	30-80	30-80	30-80	30-80	30-80	30-80
Operation Range (@Underfloor heating)	°C	30-45	30-45	30-45	30-45	30-45	30-45
Max. Limit temperature	°C	>90	>90	>90	>90	>90	>90

Domestic Hot Water (only valid for HM)							
Min. Domestic flow for operating	L/min	2,5 (±%10)	2,5 (±%10)	2,5 (±%10)	2,5 (±%10)	2,5 (±%10)	2,5 (±%10)
Min. Domestic flow for closing	L/min	2,0 (±%10)	2,0 (±%10)	2,0 (±%10)	2,0 (±%10)	2,0 (±%10)	2,0 (±%10)
Max. Domestic hot water flow rate	L/min	10 ±%15 (ΔT = 36,1°C)	10 ±%15 (ΔT = 36,1°C)	12 ±%15 (ΔT = 32,4°C)	12 ±%15 (ΔT = 37,6°C)	12 ±%15 (ΔT = 40,0°C)	14 ±%15 (ΔT = 36,8°C)
Min. Water Pressure	bar	0,4	0,4	0,4	0,4	0,4	0,4
Max. Water Pressure	bar	10	10	10	10	10	10
Operation Range	°C	30-65	30-65	30-65	30-65	30-65	30-65
Max. Limit temperature	°C	≥ 71	≥ 71	≥ 71	≥ 71	≥ 71	≥ 71
General							
Electrical Supply	V AC-Hz	230 VAC-50 Hz					
Electrical consumption (Max-Std Pump)	Watt	120	130	145	155	170	190
Electrical consumption (Max-HE Pump)	Watt	65	80	85	110	130	165
Protection Class		IPX4D					
Expansion Vessel	lt	8					
Weight (Net)	kg	31			32	32	34
Dimensions (HxWxD)	mm	678*410*288					
Flue Lengths							
C13 – 60/100 Max.	m	10	10	10	10	10	10
C13 – 80/125 Max.	m	20	20	20	20	20	20
C33 – 60/100 Max.	m	10	10	10	10	10	10
C33 – 80/125 Max.	m	20	20	20	20	20	20
C43 – 60/100 Max.	m	10	10	10	10	10	10
C53 – 60/100 Max.	m	10	10	10	10	10	10
C83 – 80/80 Max.	m	28	28	28	28	28	28
C83 – 80/80 Min.	m	3	3	3	3	3	3
B23 – 80 Max.	m	28	28	28	28	28	28
B33- 60/100 Max.	m	10	10	10	10	10	10
Emission Values							
CO ₂ ratio (@max-G20)	%	9,2 ± 0,2	9,2 ± 0,2	9,3 ± 0,2	9,5 ± 0,2	9,5 ± 0,2	9,5 ± 0,2
CO ₂ ratio (@min-G20)	%	8,7 ± 0,2	8,7 ± 0,2	8,7 ± 0,2	8,9 ± 0,2	8,9 ± 0,2	8,9 ± 0,2
CO ₂ ratio (@max-G31)	%	10,4 ± 0,2	10,4 ± 0,2	10,4 ± 0,2	10,6 ± 0,2	10,6 ± 0,2	10,6 ± 0,2
CO ₂ ratio (@min-G31)	%	9,6 ± 0,2	9,6 ± 0,2	9,6 ± 0,2	9,9 ± 0,2	9,9 ± 0,2	9,9 ± 0,2
Boiler Circuit (only valid for HST)							
Operation Range	°C	30-65	30-65	30-65	30-65	30-65	30-65

Note : All models may not be on sale. Please refer your dealer.

5.5- Electrical Diagram

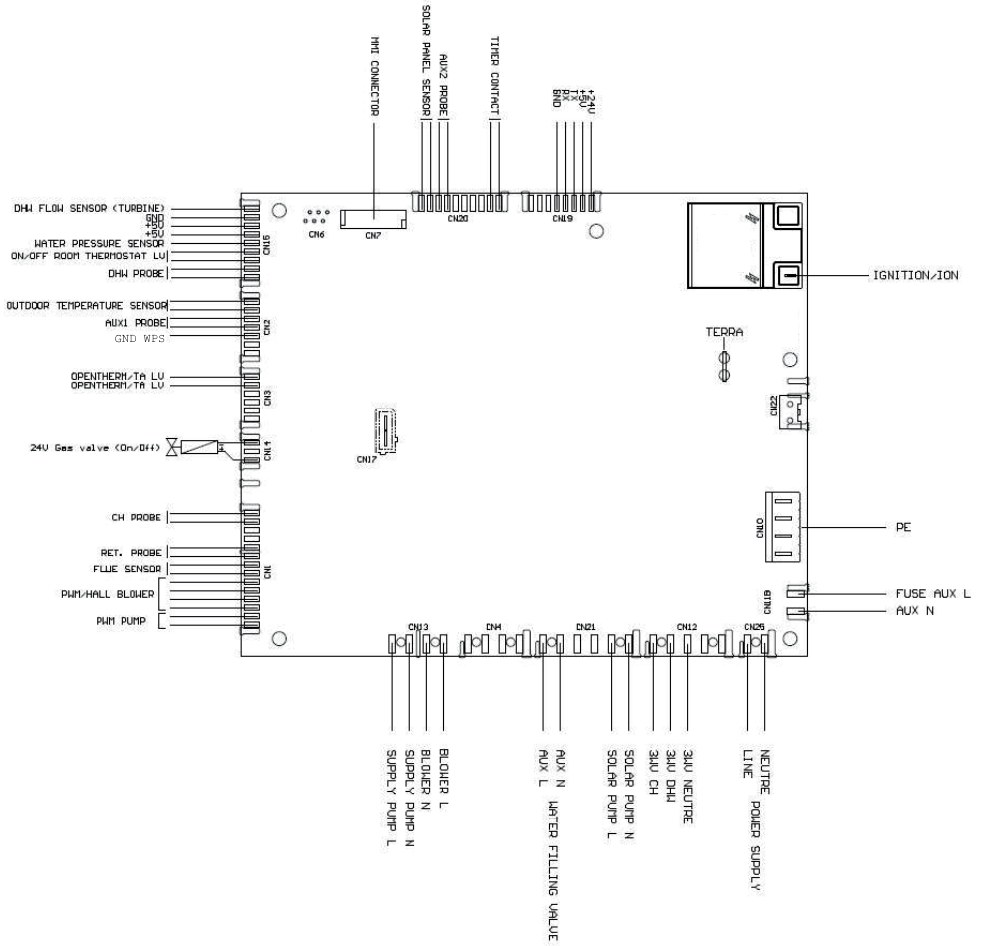

6- BOILER PACKAGING



CAUTION: Attention must be paid to warning on packaging regarding handling and storage.

•The device is delivered with a cartonboard with dimensions of 735 x 345 x 490 (HxWxD) mm, supported by upper and lower styrofoams.

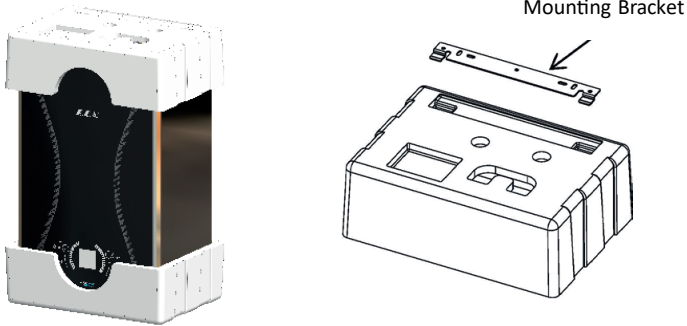


Figure 4

- Parts required for installation of the device (wall bracket, 5 gaskets for HM and HCH and 6 gaskets for HST water and gas connections, 2 anchors and 2 fixing screws) are placed on the top styrofoam.
- The hermetic flue set is delivered in a carton box separate from the unit. The standard hermetic flue set ($\varnothing 60/100$ or $\varnothing 80/125$) consists of the following components (Figure 5).

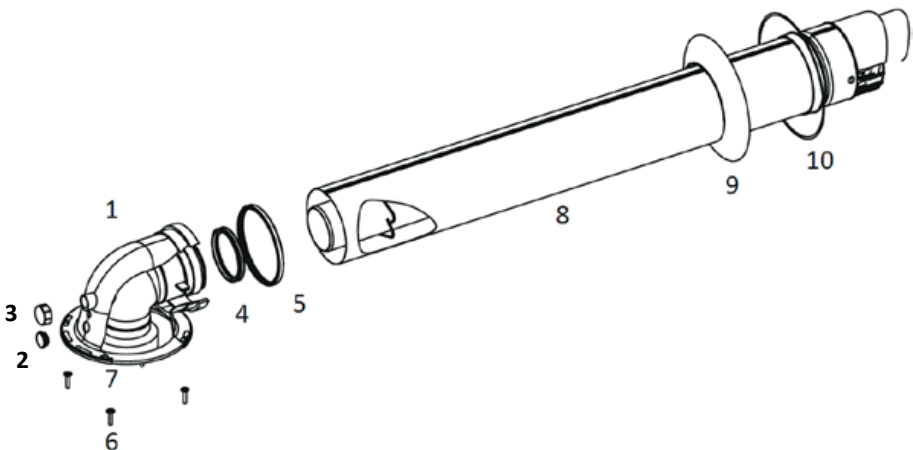


Figure 5

1-90° Elbow	6- Flange Screws
2- Exhausted Gas Tap	7- Flange Gaskets
3- Air Inlet Tap	8- Flue Exhaust Terminal
4- Sealing Gasket Ø60 or Ø80	9- Inner Wall Connection Flange
5- Sealing Gasket Ø100 or Ø125	10- Outer Wall Connection Flange (EPDM)

Table 3

7- FLUES

7.1- Flue Sizes

Flue gas connections between the boiler and the flue terminal must be made using original components specially designed for the condensing boiler to ensure that the device operates efficiently and correctly. Flue gas pipes and fittings of non-condensing boilers can not be used for exhausting gases from condensing boilers. In the horizontal concentric flues, the exhaust gas pipe (the inner pipe) facing outwards should be inclined upward and the fresh air pipe (outer pipe) should be inclined downward. When the original flue set is installed parallel to the ground, the exhaust gas pipe is automatically inclined upwards.

Equivalent length for each 90° elbow: 1 m

Equivalent length for each 45° elbow: 0.5 m

7.2- Flue Types

The terminals for the supply of combustion air and for the evacuation of combustion products shall not be installed on opposite walls of the building. Information for C43 flue type is given below.

	Confeo Premix P					
	14 kW	20 kW	24 kW	28 kW	30 kW	35 kW
Flue gas max flow rate (gr/sec)	5,8996	8,428	10,1136	11,7208	13,6808	13,9552
Flue gas min flow rate (gr/sec)	2,2638	3,234	3,8808	2,744	3,528	3,6064
Flue gas max temperature (C)	80	80	80	80	80	80
Flue gas min temperature (C)	30	30	30	30	30	30
Flue gas Pressure	100 Pa					

Table 4

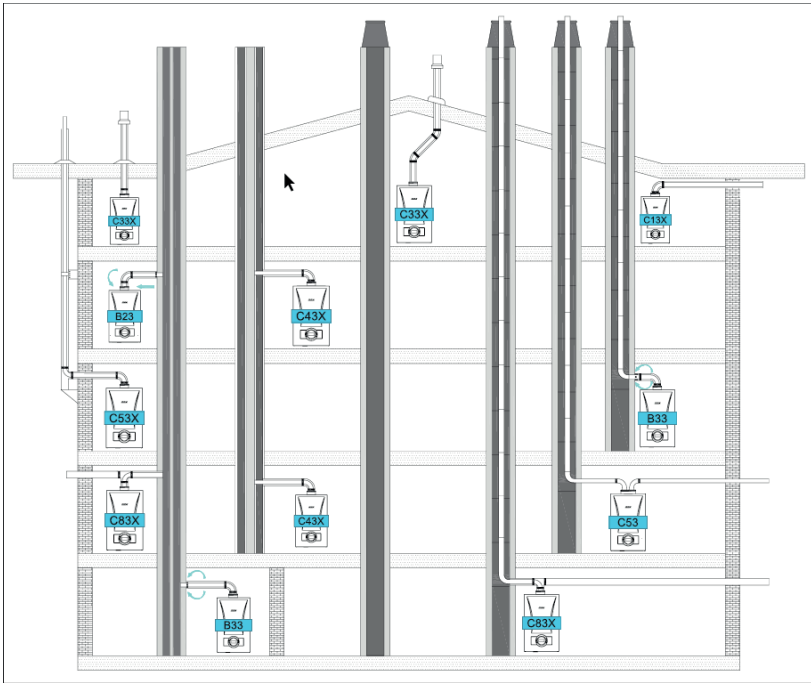


Figure 6

7.3- Distances for Placement of Flues

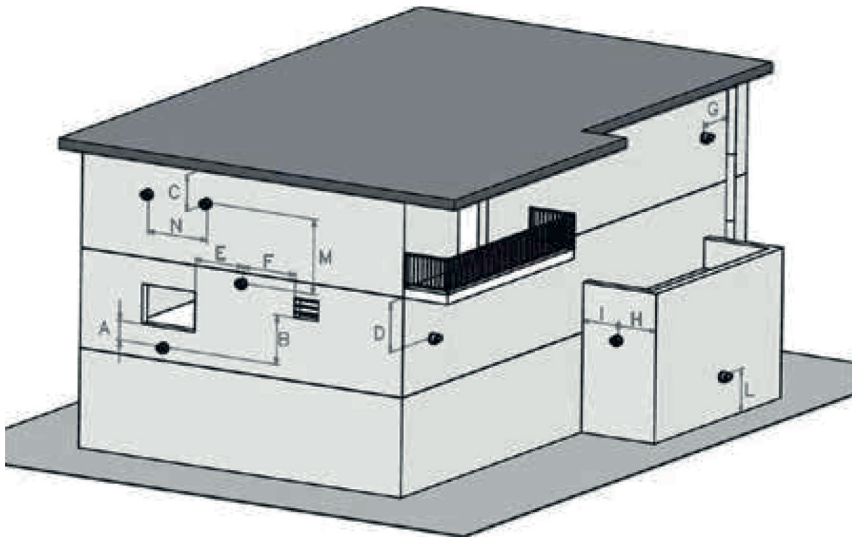


Figure 7

POSITION	DISTANCE(cm)	POSITION	DISTANCE (cm)
A- Below a window	60	G- Next to vertical or horizontal pipe	60
B -Below an air vent	60	H- Below the distance grille from the outside of the building	30
C-Below rain channel	30	I- Distance from the inner corner of the building	100
D- Under the balcony	30	L- From the ground or from the floor	180
E- Next to a window	40	M- Vertical distance of two flue outlets	150
F- Next to an air grill	60	N- Horizontal distance of two flue outlets	100

Table 4

8- INSTALLATION

8.1- Selection of Installation Location of Device

The boiler must be installed in accordance with gas safety regulations and relevant standards. Additionally, the clearance around the boiler should be as shown in fig 8. In order to make service, maintenance and usage easier.

Figure 8: It shows the minimum distances required from the top and sides of the device (Dimensions given in cm).

The installation must comply with the following minimum distances so that servicing and maintenance of the boiler can be performed correctly. The position of the boiler must be checked against technical requirements.

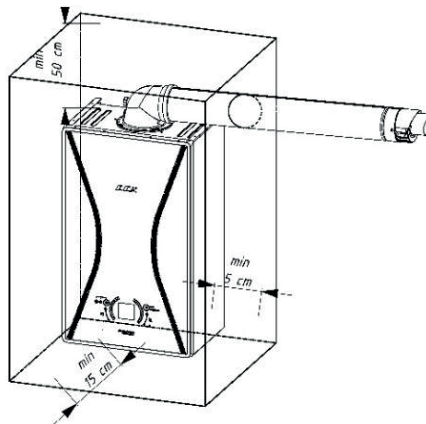


Figure 8



•Do not install your boilers in locations that will be exposed to direct sunlight. Sunlight can cause color change on the exterior of your device over time. Ambient temperature of device's installation location should be between 5-35°C.



• The device can be used at altitudes up to 2000 m above sea level.



•There is no need to remove side panels in the combi boiler service operations. Minimum 50 mm clearances are given taking into consideration the share of possible side panel sheet changes.

Since the outside temperature of the device does not rise above 85 ° C at the maximum heating power, no special protective measures are required against the combustible construction materials and components.

8.2- Independent Operation from Ambient Air (Type C)



DANGER: For room sealed operation, the boiler location and air/flue terminal position must obey national and local requirements, gas safety regulations and relevant standards

IPX4D protection class devices are not suitable for unprotected outdoor installations. These devices should be installed inside of the building or installed with proper boiler cabinet. to the outdoor. In case of gas leakage, it is necessary to vent the installation room according to national and local requirements, although the room sealed operation boilers are independent of room volume and ventilation.



DANGER: Do not block the air vents which provide fresh air to the installation room.

-The air/flue terminal must be exposed to the external air and allow free passage of air cross it at all times.

-The minimum acceptable dimensions from the terminal to obstructions an ventilation openings must obey national and local requirements.

- All horizontally fitted ducts (air/flue) should be fitted 2° or 3° upwards incline to allow condensate water drain to the boiler.



• The flue ducts are always wet.



• Under cold or excessive humid weather conditions the water vapor inside the waste gas may condensate while leaving the flue.

8.3- Mounting the Boiler

After determination of boiler mounting location follow the instructions given below.

- The points of lock screws of wall bracket and assembly bracket are marked by using the assembly template inside installation and user's operating instructions of the device (pages 34-35-36).
- After drilling the marked points, wall assembly bracket and assembly bracket are fixed on the wall by the dowel and lock screws which are inside the packaging of the device.
- Finally, the boiler is hanged on the wall by placing the assembly bracket on the back side of the boiler on the mounting bracket assembled on the wall.



Figure 9

9- CONNECTIONS

9.1- Condensate Discharge Connection



All condensing boilers generate condensing discharge. The amount of the condensate water depends on the working conditions of your appliance. This can be up to 1.7 litres condensate water per hour.

- The condensation water must be connected to a drain with the help of a plastic hose which is connected to the end of siphon. The use of standard discharge hose, which is given with boiler (50 cm), is recommended for connection to the drain. The addition of 1 cable tie connection on the hose should be made for fixing.
- If drain hose will be connected to drain outside of the building, insulation should be provided to prevent freeze of hose.
- The condensate discharge hose and interconnection parts must be made of plastic material.
- All horizontal parts must be connected at a slight 2° or 3° downwards incline to ensure to a good flow.



Figure 10

9.2- Gas and Water Connections

Water and gas supply connections between the boiler and the mounting bracket can be fixed with the pipes and the nipples.

9.2.1- HM Model



- a) CH flow $\frac{3}{4}$ " (hot)
- b) DHW outlet $\frac{1}{2}$ " (hot)
- c) Gas inlet $\frac{3}{4}$ "
- d) DHW inlet $\frac{1}{2}$ " (cold)
- e) CH return $\frac{3}{4}$ " (cold)

- A suitable valve should be mounted on the gas inlet and CH & DHW water circuit. In addition, a water filter must be mounted on CH ($\frac{3}{4}$ " return and DHW ($\frac{1}{2}$ " inlet.

- A plastic pipe should be fixed the outlet tap of the three bar relief valve and the pipe should be connected to the drain line.


- The connection between the appliance and gas supply must be made with a flexible pipe.

- National and local requirements must be taken into consideration.

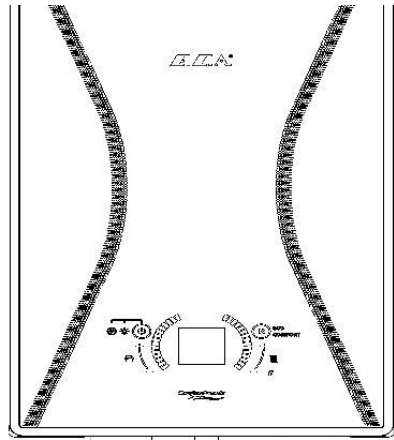


9.2.2- HCH Model

- a) CH flow $\frac{3}{4}$ " (hot)
- b) Water filling line $\frac{1}{2}$ "
- c) Gas inlet $\frac{3}{4}$ "
- d) CH return $\frac{3}{4}$ " (cold)

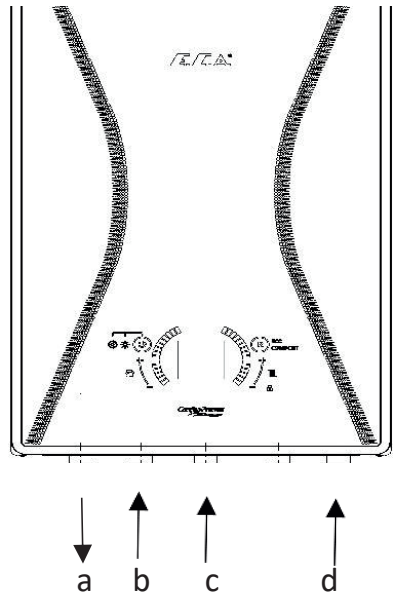

9.2.3- HST Model

- a) CH flow $\frac{3}{4}$ " (hot)
- b) Boiler supply water (hot)
- c) Gas inlet $\frac{3}{4}$ "
- d) Boiler return (cold)
- e) Water Filling Line $\frac{1}{2}$ "
- f) CH return $\frac{3}{4}$ " (cold)

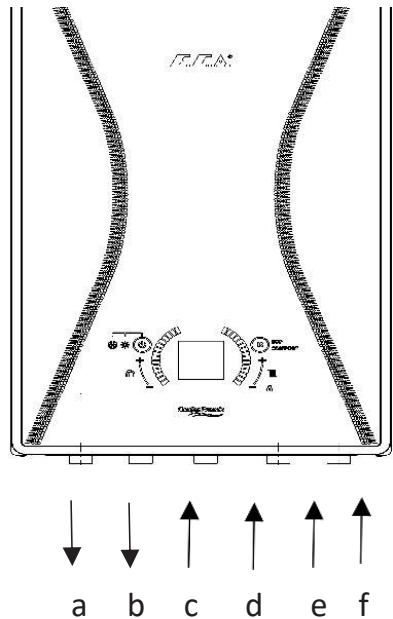

9.3- Electrical Connection

Electrical installation must be made according to the national and local instructions. The boiler must be earthed and a standard 230 V AC – 50 Hz supply is required.



CAUTION: Disconnect power supply to prevent electrical shock before connecting the electrical supply.



CAUTION: If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified person in order to avoid a hazard.



CAUTION: The 2-amp bipolar fuse with a minimum contact opening of 3 mm must be used in the electrical connection of the boiler.



CAUTION: The cable diameter (including insulation) of the electrical installation to be installed must be at least 14 mm and the pipe diameter used must be at least 16 mm.

9.4- Room Thermostat

Optional room thermostats compatible with your device can be used to control heating system.



E.C.A. On/Off Room Thermostat
T6360
7006901312



E.C.A. Smart Room Thermostat
Boiler-Air Conditioning
7006907804



E.C.A. Smart Room
Thermostat
7006907531



E.C.A. Digital Room Thermostat Wireless,
Programmable CM727
7006902046



E.C.A. Digital Room Thermostat
Honeywell DT90
7006902502



E.C.A. On/Off Wireless Room Thermostat
7006907522

E.C.A. On/Off Room Thermostat
7006907519



E.C.A. Programmable Digital Room
Thermostat - CM707
7006901313
Wireless
7006901501

9.5- Outdoor Temperature Sensor

To connect the room thermostat or outdoor sensor to the device, the connections behind the control panel are used. For the room thermostat, the bridged cable connection on the back of the control panel is removed and the outer air sensor is connected to free sockets on the terminal.



- It can be provided as an option according to boiler models.
- It allows operation of combi boiler adjusted to outside temperature.



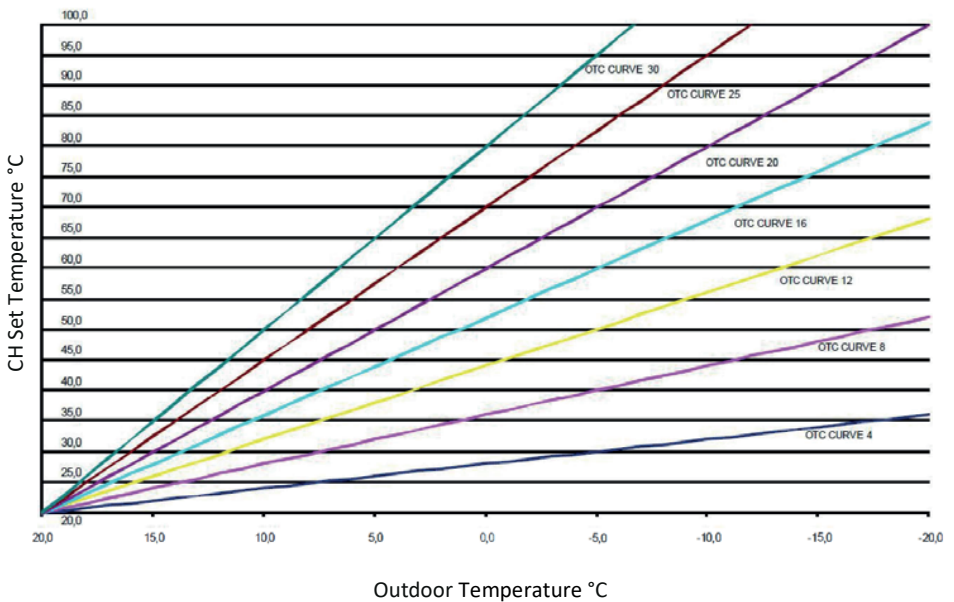


Figure 15

9.6- Room Thermostat and Outdoor Temperature Sensor Connection

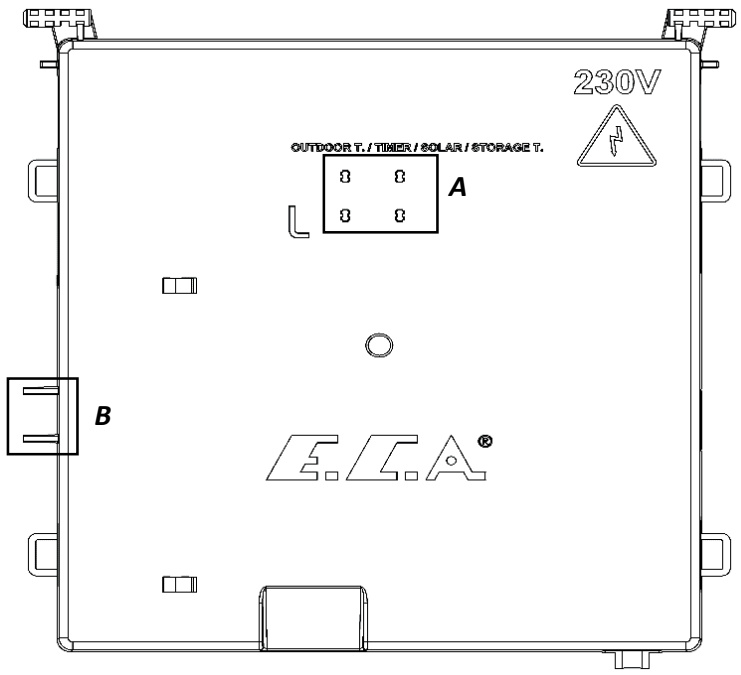

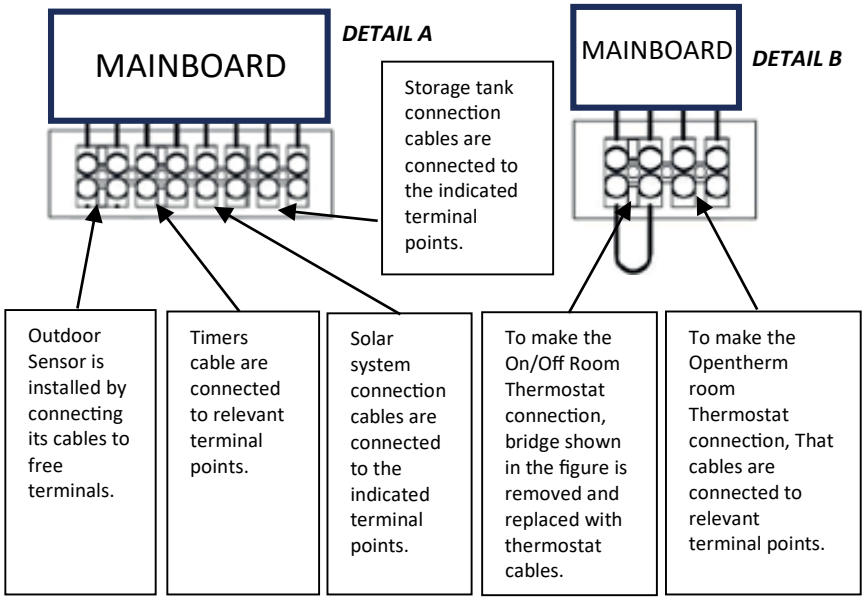

In your combi only E.C.A. Room thermostats approved by authorized services should be used. Otherwise, it may cause your device to malfunction. In such cases, no liability is accepted..

The connections of room thermostat, outdoor sensor and timer must be performed certainly by qualified person. For Room Thermostat activation, special parameter adjustment must be done by qualified person.

10- COMMISSIONING, USE AND TURNING OFF THE BOILER

10.1- Commissioning, Filling Water into Boiler and Heater Installation

First of all, the electrical connection of the boiler is done. The electrical connection of the device must be connected to a grounded power supply line that can supply enough voltage (230 VAC, 50 Hz) for the device.

- All radiator valves must be opened.

- CH flow and CH return of boiler must be opened. Check them.

- After all these processes, filling valve is slowly opened and filling procedure is initiated.

The filling process continues until the water pressure of 1.5-2 bar is seen on the LCD display and then the filling valve is closed.

- When the water pressure increases to 0.8 bar, the LCD will show "AP" and the boiler will switch to automatic air vent mode. In this case you should definitely wait for 160 seconds without pressing "RESET".

- Check water pressure on pressure indicator frequently and ensure that the pressure is between 1.5 and 2 bar when system is cold. If the pressure drops frequently, it means that there is a water leak in the system. In such case, it is necessary to call a plumber.

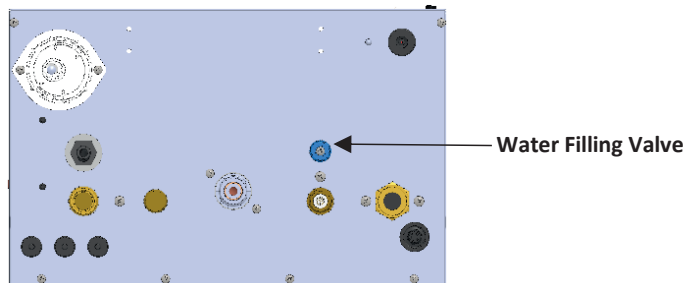


Figure 17



ATTENTION : Always close the water filling valve, the installation water may leak and damage the environment.

- To discharge air out of CH installation, purgers of the radiator is loosened and air is discharged until water comes out of radiators. This procedure is done for all radiators.

- Pressure is checked again on LCD screen. The filling valve is opened and again pressure is raised to 1.5 – 2 bar level.

- Radiator purgers are checked again to see if there is any air left inside of heating installation. For full efficient heating, all air must be discharged.

- Please repeat AP mode after electricity off and on.

- Finally, check for any leaks in the radiator and piping.



ATTENTION: In order to prevent calcification of the heat exchanger, you are advised not to use hard water, natural spring water instead of mains water.

- Check the domestic water installation by opening the hot water tap. Check for any leaks in the piping.
- The exhaust gas flue assembly must be installed from the original parts in accordance with the instructions.
- Gas supply must be checked by the qualified gas company.
- Must be called authorized service to start up the boiler after all these processes are completed.
- Commissioning must be strictly performed by authorized service.
- At the end of the commissioning of the device after installation, please ask for information of authorized service on operating the device and relevant safety devices on device.

10.2- Using the Device

10.2.1- Switching off the Device

You can switch off the boiler by holding down the ON/ OFF button for 5 seconds. LCD light will be reduced to %75 after 1 minute. Frost protection remains active.

11- CONTROL PANEL

11.1- Icons of Buttons

The control panel consists of the relevant elements as shown in figure 18 below.

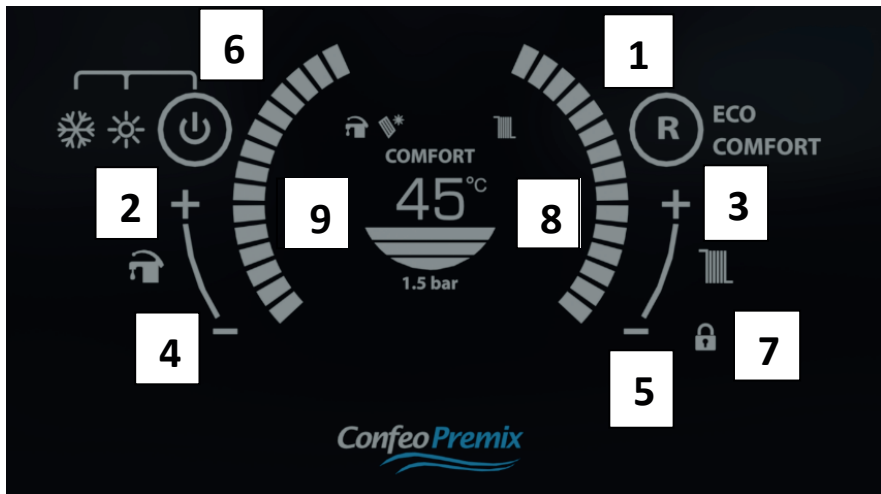


Figure 18

1 Nu. Button: Reset Button

Main Functions :

- Exit from lockout error (EXX)
- ECO mode activation
- Comfort mode activation

When your device fails, the error code will start flashing on the display. There are 2 types of errors, lockout (EXX) and blocking (FXX) error. When a lockout error condition occurs (EXX), the error must firstly be corrected so that the error code can be removed from the LCD screen. After pressing the "Reset" key once, the device can switch back to normal operation state. As for a blocking error, the fault cannot be removed from the LCD display pressing the "Reset" button (FXX). When this error is corrected, error code is automatically disappears from LCD screen. The first time the device starts, it will start operation in Comfort mode.

Once the Reset button is pressed when operating in Comfort mode, the device will switch to Eco mode. Then when Reset button is pressed again, the unit will switch to Comfort mode.

2 Nu. Button: Domestic Hot Water Increase Temperature Button

The temperature of the domestic water can be increased up to 65 °C thanks to the domestic water temperature increase button.

3 Nu. Button: Central Heating Water Increase Temperature Button

The temperature of the heating water can be increased up to 80 °C thanks to the heating water temperature increase button.

4 Nu. Button: Domestic Hot Water Decrease Temperature Button

The temperature of the domestic water can be decreased down to 30 °C thanks to the domestic water temperature decrease button.

5 Nu. Button: Central Heating Water Decrease Temperature Button

The temperature of the heating water can be decreased down to 30 °C thanks to the heating water temperature decrease button.

6 Nu. Button: Position Selection Button (On/Off and Summer/Winter Switch Button)

Main functions;

The position can be changed by pressing the position selection button once to change between the winter mode and the summer mode. If the button is pressed for 5 seconds, the device will switches into "standby" position. It will suffice to press the button once to get the device in operation position.

7 Nu. Button: Child Lock Button

It is active when the Child Lock Button is kept pressed for 5 seconds and no touch button on the screen performs its function. Just press and hold for 5 seconds to remove it from the child lock.

8 Nu. Button: Central Heating Slider Temperature Button


The temperature of the heating water can be adjust between 30°C – 80 °C thanks to the central heating slider temperature button.

9 Nu. Button: Domestic Hot Water Slider Temperature Button

The temperature of the domestic water can be adjust between 30°C – 65 °C thanks to the domestic hot water slider temperature button.

11.2- LCD Screen

LCD screen display icons described here below.

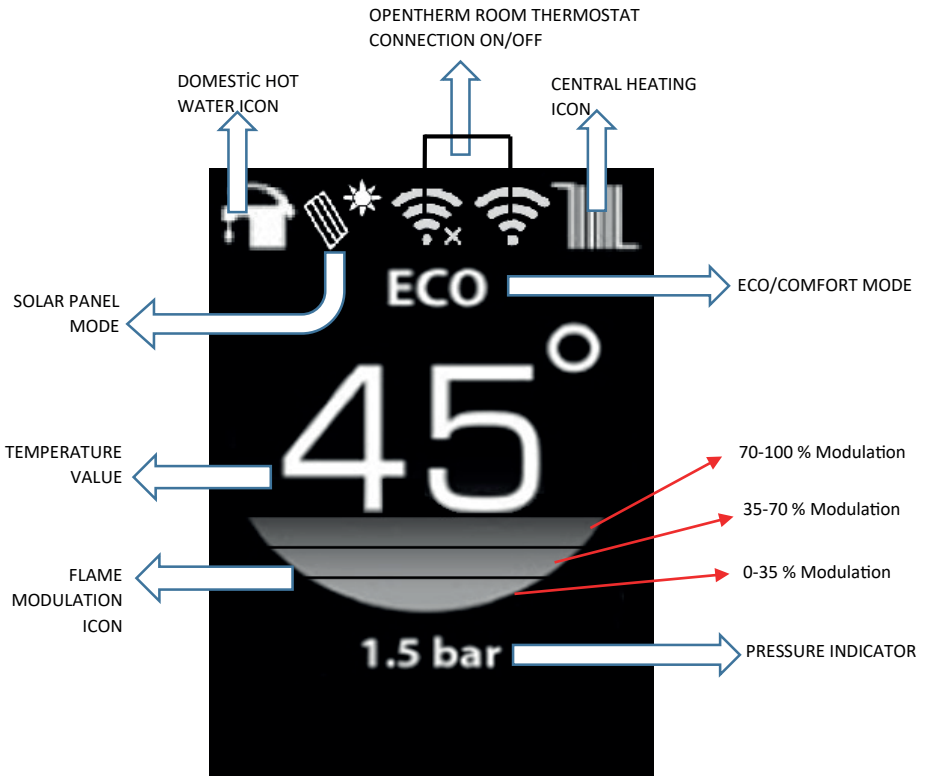

11.2.1- Flame Icon

When operating between 0% and 35% capacity range, the icon is displayed on the LCD screen as single bar, whereas it is displayed as two bars when operating between 35% -70% capacity range. If it is displayed as three bars when operating between 70% -100% capacity range.

11.3- Operation Functions

11.3.1- Standby (OFF Mode)

It is the mode in which the device can be placed in standby. When this mode is taken, central heating and domestic water heating demands are not made. To switch to OFF mode, it is necessary to hold the button "6" (position selection button) continuously for 5 seconds.

The mode is activated when the word "OFF" appears on the screen.

11.3.2- Air Discharge Mode (AP Mode)

It is the process that the device applies automatically to discharge the air in the central heating installation for 160 seconds. "AP" appears on the display during this mode. The circulation pump runs for 15 seconds every 20 seconds and stops for 5 seconds. The three-way valve motor also changes positions between CH-DHW every 40 seconds. The situations where this mode is applied are listed below.

- Once the device is powered for the first time or after the electricity has been switched off and on,
- After the reset operation following the overheating fault (E03),
- After elimination of high water pressure (F40) or low water pressure (F37) error,



Do not press 'RESET' while AP mode is active.

11.3.3- Winter mode - Radiator Heating

If the device in the standby position is set to the winter position, the appliance will heat the water in the heating circuit until the domestic water is needed. In the winter mode, both the tap and the radiator icon are displayed on the LCD screen.. When a request for heating is made for radiator, radiator icon flashes (once/second), tap icon stays fixed. When a request for domestic water is made, tap icon flashes (once/second), radiator icon stays fixed. In this mode, radiator heating circuit's temperature can be set between 30-80 °C. For under floor heating applications, the temperature range can be set between 30-45 °C.

11.3.4- Summer Mode

If the device in the OFF position is set to the summer position, the device will only respond to the domestic hot water demands. In summer mode, the tap symbol appears fixed on the LCD screen, the radiator icon does not appear. When the domestic hot water is heating request, the tap symbol flashes (1 time / second). In this mode, the domestic hot water temperature can be adjusted between 30-65 °C.

11.3.5- Comfort Mode

The standard operating mode of the device is Comfort mode. By pressing the "Reset" button, Eco-Comfort modes can be switched. When Comfort mode is active, "Comfort" icon is displayed on the LCD screen. Comfort mode is only for radiator heating circuit. It has no effect on use of domestic water circuit. In this mode, the device responds to fast heating demands by running in modulation.

11.3.6- ECO Mode

By pressing the "Reset" button, Eco-Comfort modes can be switched. When Eco mode is active, "Eco" icon is displayed on the LCD screen. Eco mode is only for radiator heating circuit. It has no effect on use of domestic water circuit. This mode allows fuel saving by performing on-off operation.



11.3.7- Maintenance Reminder Mode

It is the mode where a reminder for yearly maintenance is activated. When this mode is active, only "ASE" is displayed on screen and device continues to meet heating requests. When you see "ASE" on screen, please get in contact with E.C.A. authorized services for yearly maintenance.

11.3.8- Frost Protection Mode

During the winter season, when the installation water temperature falls below 6 ° C, the anti-freeze function is activated and the device continues to operate until the water rises to 15 ° C. In order to keep activated frost protection, the following conditions must be checked and ensured by the customer.

- The power supply of the device must be switched on.
- The gas valve and radiator valves must be open.
- Water pressure of system must be at appropriate level.
- The anti-freeze function helps protect your device, it does not protect your installation.
- If device will not be operated for a while in places where there is risk of freezing, then it is necessary to drain the water or to use an anti-freeze agent.

12- ERROR CODES VE DESCRIPTIONS

Error Code	Error Type	Possible Cause	Troubleshooting
E01	Ignition Fault	No gas connection for combi boiler.	<ol style="list-style-type: none"> 1- Check that the gas valve is open. 2-Check if there is gas in installation. 3- Press reset button. 4- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E02	False Flame Signal	It is triggered if flame is detected in the burner while gas valve is closed.	<ol style="list-style-type: none"> 1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E03	Over Temperature Warning	It will occur if the temperature of return and supply water exceeds 90 C.	<ol style="list-style-type: none"> 1- Check that water valves of boiler installation are open. 2- If the combi boiler triggers this error in winter mode, check that at least 1 radiator is open. 3- Press reset button. 4- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E15	Measurement deviation fault of temperature sensors	Temperature sensors might be defective.	<ol style="list-style-type: none"> 1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.

E16	Error on Temperature Sensor for Supply Water	No temperature is detected by temperature sensor for supply water.	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E17	Error on Temperature Sensor for Return Sensor	No temperature is detected by temperature sensor for return sensor.	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E18	Temperature Sensor Error	The temperature change on the temperature sensor is too high (> 30 C)	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E33	Error on Temperature Sensor for Return Sensor	The return water temperature sensor is in short or open circuit state.	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E35	Error on Temperature Sensor for Supply Water Temperature	The outgoing water temperature sensor is in short or open circuit state.	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E38	Low water pressure error 1 week after last water filling	Water leakage in plumbing or boiler	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E44	Valve provides no feedback	The gas valve may be failed.	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E64	Hardware Faults 1	Specific fault in hardware	1- Switch off and on the boiler. 2- If the error is still present (or persists) after switch off/on, notify authorized service of E.C.A.
E65	Hardware Faults 2	Specific fault in hardware	1- Switch off and on the boiler. 2- If the error is still present (or persists) after switch off/on, notify authorized service of E.C.A.
E80	Temperature difference error between return water temperature and supply water temperature sensor	Temperature detected by temperature sensor for return water is higher than temperature detected by temperature sensor for supply sensor	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E82	Flame failure (more than 12 flame loss in one hour)	Flame detection problem	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E83	High Temperature Error for Flue Gas (twice F07 error in last month)	Main Exchanger problem	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
E98	Hardware Faults 3	Specific fault in hardware	1- Switch off and on the boiler. 2- If the error is still present (or persists) after switch off/on, notify authorized service of E.C.A.
E99	Hardware Faults 4	Specific fault in hardware	1- Switch off and on the boiler. 2- If the error is still present (or persists) after switch off/on, notify authorized service of E.C.A.

F05	Fan Feedback Fault	Failure of fan or fan cable	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
F07	Over Temperature Error for Flue Gas	It occurs when the temperature of the flue gas exceeds 95 °C.	1- Notify authorized service of E.C.A.
F10	Insufficient water circulation error	Clogging in installation	1- Notify authorized service of E.C.A.
F13	Repeated Reset Fault	Pressing of Reset button more than 5 times in an hour	1- Notify authorized service of E.C.A.
F34	Low Supply voltage	It occurs when the supply voltage falls below 170V.	1- Notify authorized service of E.C.A.
F36	Main Frequency Fault	Main (electricity) problem	1- Notify authorized service of E.C.A.
F37	Low Water Pressure Fault	It occurs when water pressure sensor detects a relatively low water pressure (0.4 bar) for your device.	1- Check water pressure in heater installation of your device. 2- Fill the system with water until the pressure reaches 1.5-2 bar (device will eliminate error when the pressure is over 0,8 bar). 3-Check your valves and installation against leaks. 4- If the problem is still present (or persists), notify authorized service of E.C.A.
F39	Outdoor Temperature Sensor Fault	Outdoor temperature sensor might be defective.	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
F40	High Water Pressure Fault	It occurs when water pressure sensor detects a relatively high water pressure (2,9 bar) for your device.	1- Check water pressure in heater installation of your device. 2- Tur off the device and restart it. 3- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
F41	Water Filling (Auto) Running	Automatic water willing is continuing	1- Notify authorized service of E.C.A.
F42	Water Fillin (Auto) Not Completed	Water filling valve may be failed or mains water pressure may be insufficient.	1- Notify authorized service of E.C.A.
F43	Low Water Pressure After Auto Water Filling Fault	Water filling valve may be failed or mains water pressure may be insufficient.	1- Notify authorized service of E.C.A.
F47	Water Pressure Sensor Error	Water pressure sensor is not plugged in or there is no contact.	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.

F49	Modulation Room Thermostat Communication Fault	Room Thermostat may be failed or connection problem	1-Switch off and on the boiler. 2- Press reset button. 3- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
F50	Storage Tank Sensor Fault	Storage tank sensor might be defective.	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
F51	PT1000 solar sensor error	PT1000 solar sensor might be defective.	1- Press reset button. 2- If the error is still present (or persists) after reset, notify authorized service of E.C.A.
F52	Error on temperature sensor for domestic water	Temperature sensor for domestic water might be defective.	1- Notify authorized service of E.C.A.
F53	Error on temperature sensor for flue gas	The flue gas temperature sensor is in short or open circuit state.	1- Notify authorized service of E.C.A.
F81	Temperature sensor deviation test delay	Temperature sensors might be defective.	1- Notify authorized service of E.C.A.
F201	Communication Fault Between Mainboard and MMI	Mainboard-MMI may be failed or communication cable may be failed.	1- Notify authorized service of E.C.A.
PREDICTIVE MAINTENANCE WARNINGS			
1	Flame Loss Risk	Estimates the device's loss of flame condition.	1- Please contact with authorized service.
2	High Water Pressure Risk	Estimates the device's safety valve opening status.	1- Drain water until the water pressure drops to 1.5-2 bar.
3	Low Water Pressure-Water Leakage Risk'	Plumbing / boiler estimates the water leak situation.	1- Please contact with authorized service.

Table 5

13- USEFUL INFORMATION ON PRODUCT

13.1- Information on the Efficient Use of the Combi Boiler in Terms of Safety and Energy Consumption

Isolation of your building is extremely important. Energy saving is achieved at a considerable degree since the heat loss is lowest in houses with double-glazed windows and insulated walls.

- The use of thermostatic valves in your radiators ensures that the room temperature is constant or allows you to save money.
- Turning radiator valves lower levels in the rooms which will not be used for a long time and keeping the doors closed keeps fuel consumption low.
- If you use the program clock with your device, the combi boiler operates at the times you set and consumes less fuel.
- If you use your boiler with room thermostat, it keeps the boiler temperature at the level you set and thus allows less fuel consumption.
- Covering the radiator top and sides with furniture-like things negatively affects hot air circulation, thus prevents the environment from overheating and increases fuel consumption.
- If you will leave your device in operation late at night, keeping water temperature of the heating circuit at low levels will ensure saving.
- If you feel that the room temperature is high, the radiator valves should be closed instead of opening windows.

13.2- Clogging in Installation

- In old installations with iron pipes, usually clogging occurs short time after the device is commissioned.
- If clogging in installation is encountered with, then inhibitor (Sentinel X 100, etc.) should be added to installation water.

13.3- Cleaning of Boiler

Keep the outer casing of the combi boiler clean by wiping it with a soft damped cloth. Do not use strong, abrasive cleaning agents.

Performing the maintenance once a year during the warranty period and periodically before the winter season after the warranty expires ensures safe use, saves fuel and extends the useful life of the boiler.

Make sure periodic maintenance is strictly performed by E.C.A. Authorized Services.


Use original spares parts only to ensure maximum life span and safety of the device.

E.C.A will not be responsible for damages to device or material or living beings nearby caused by maintenance performed by unauthorized service or staff.


14- ANNEXES

14.1- Characteristic Curve Of Water Pressure Height Of The Pump (Pump Headflow Rate)

15-60 (14-20-24-28-30 KW)

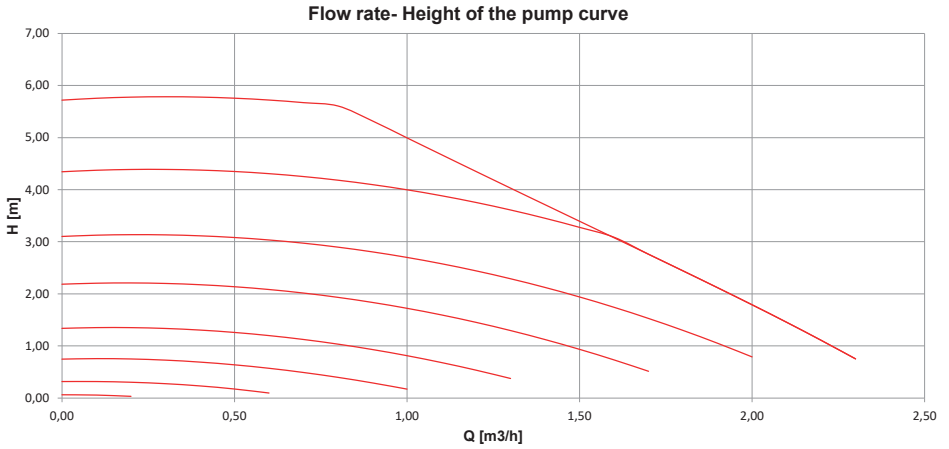


15-70 (35 kW)

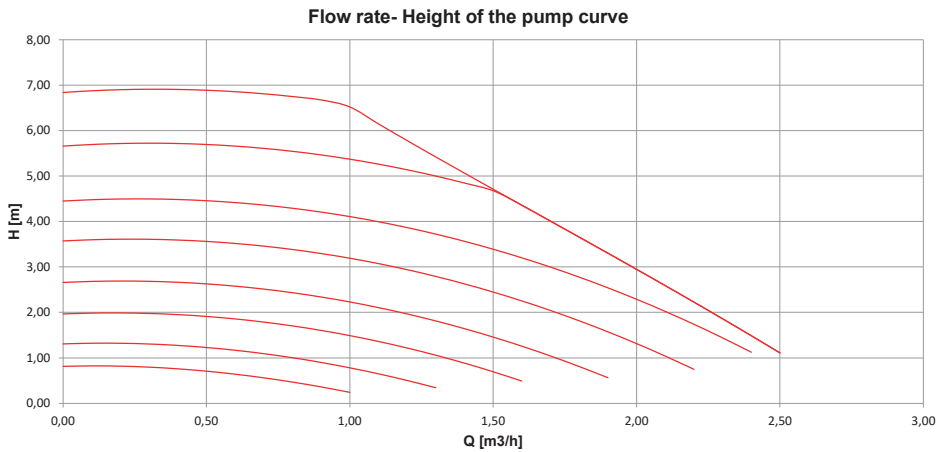


15- INSTALLATION TEMPLATE


15.1- HM Model

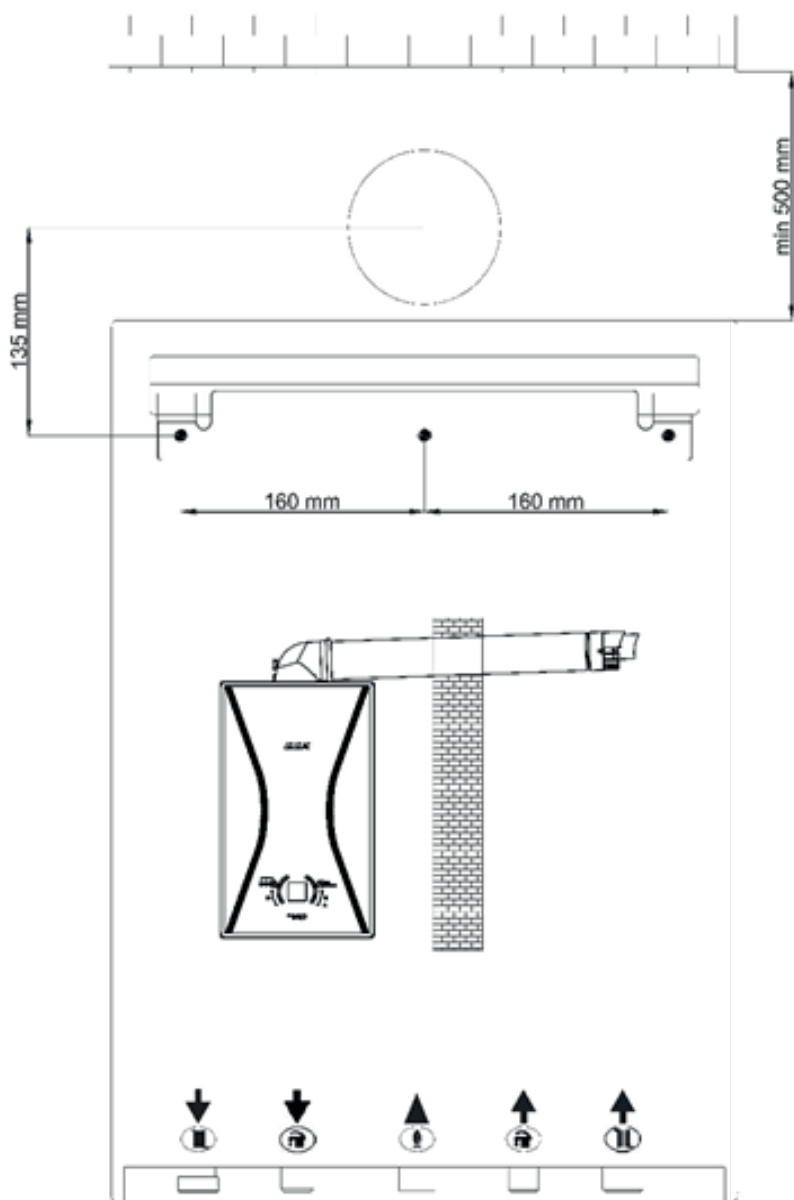

15.2- HCH Model

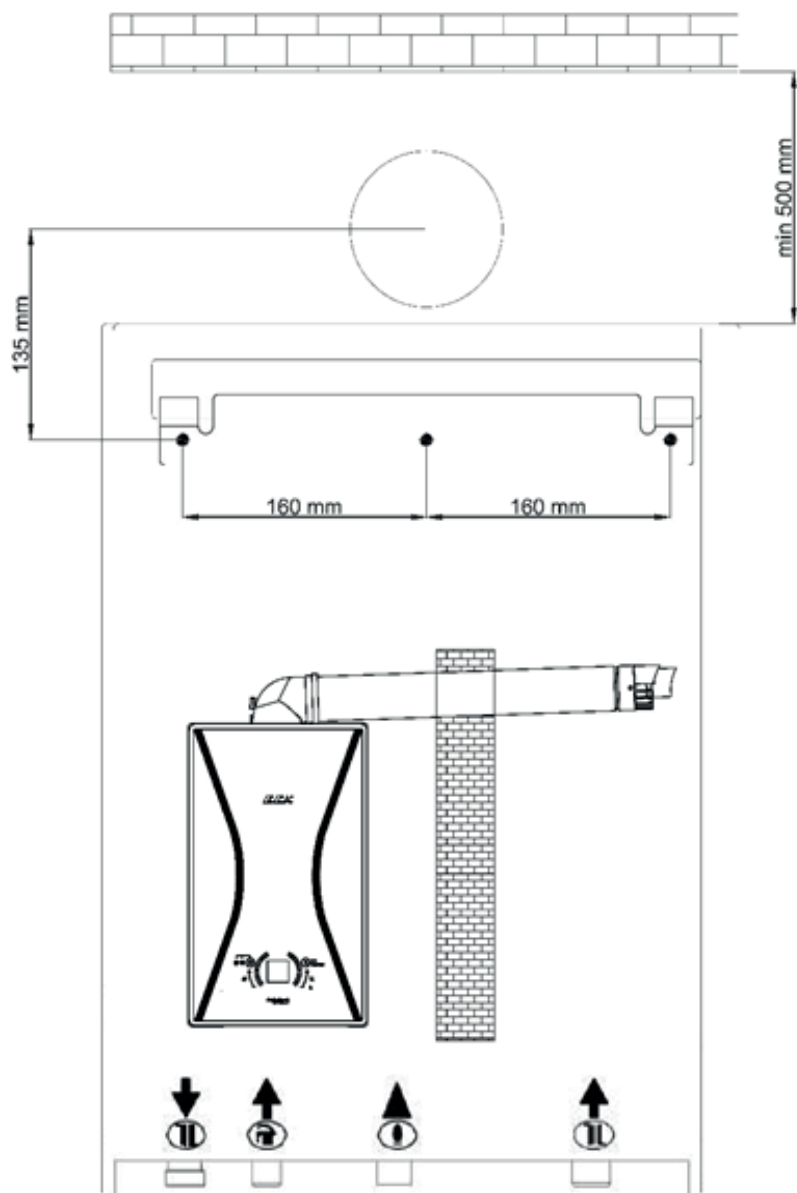

15.3- HST Model

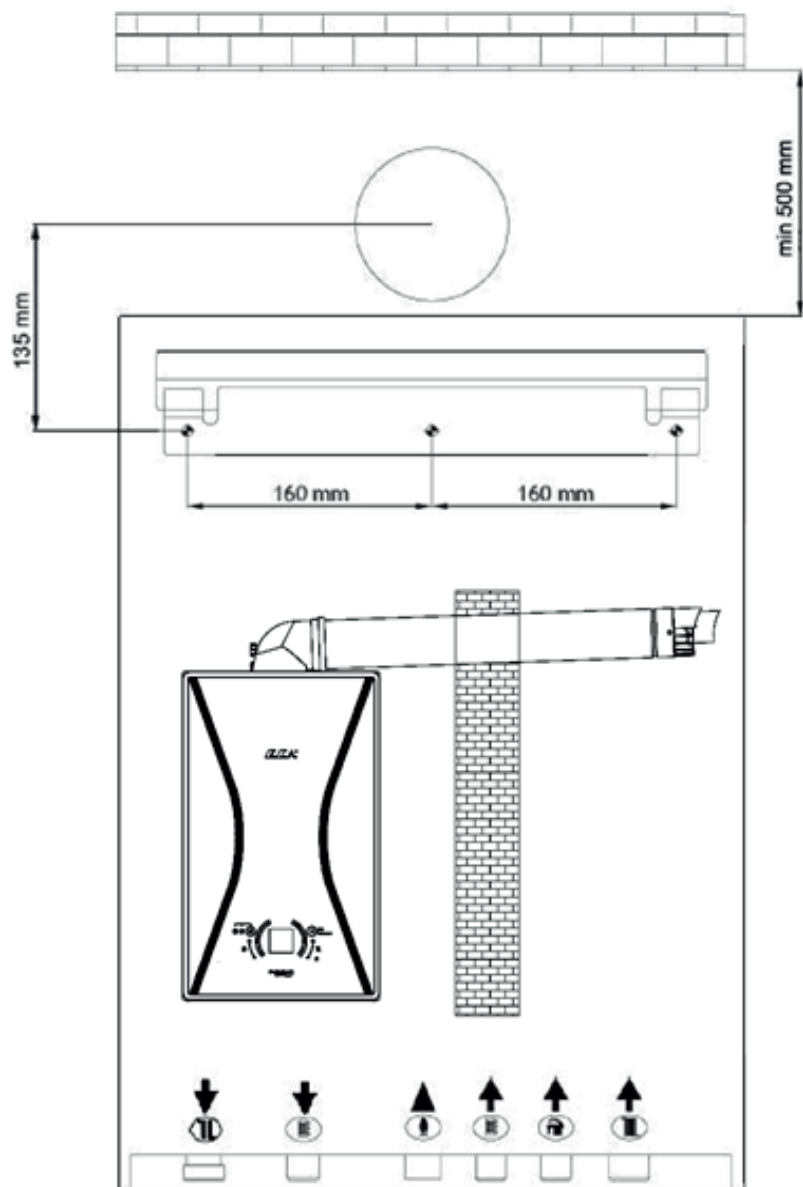

16- PRODUCT FICHES AND PACKAGE LABEL CALCULATIONS

16.1- PRODUCT FICHES

Product fiche for combination boilers as required by EU regulations No811/2013

Confeo Premix P Combi ERP		Units	HCH-HST MODEL					
Supplier's name or trademark			E.C.A.					
Supplier's model identifier			Confeo Premix P 14 kW	Confeo Premix P 20 kW	Confeo Premix P 24 kW	Confeo Premix P 28 kW	Confeo Premix P 30 kW	Confeo Premix P 35 kW
Space Heating-Temperature application			Medium					
Efficiency Class	Seasonal Space heating		A					
Rated heat output (P_{rated})		kW	14,1	20,2	24,5	28	30	35
Annual energy consumption	Space heating	kWh	12267	17574	21315	24360	26100	30450
		GJ	44	63	76	87	94	109
Energy efficiency	Seasonal space heating	%	92	92,11	92,21	92,71	92,03	92,85
Sound Power Level L_{wa} indoors		dB	44	46	47	49	50	52
Specific precautions for assembly, installation and maintenance			All specific precautions for installation, assembly and maintenance are described in the installation and service manual.					

Confeo Premix P Combi ERP		Units	HM MODEL					
Supplier's name or trademark			E.C.A.					
Supplier's model identifier			Confeo Premix P 14 kW	Confeo Premix P 20 kW	Confeo Premix P 24 kW	Confeo Premix P 28 kW	Confeo Premix P 30 kW	Confeo Premix P 35 kW
Space Heating-Temperature application			Medium					
Efficiency Class	Seasonal Space heating		A					
	Water heating		A					
Water heating load profile			XL	XL	XL	XL	XL	XL
Rated heat output (P_{rated})		kW	14,1	20,2	24,5	28	30	35
Annual energy consumption	Space heating	kWh	12267	17574	21315	24360	26100	30450
		GJ	44	63	76	87	94	109
Annual electric consumption	Water heating	kWh	44					
Annual fuel consumption		GJ	18					
Energy efficiency	Seasonal space heating	%	92	92,11	92,21	92,71	92,03	92,85
	Water heating	%	90,7	90,7	83,6	83,9	82,8	82,8
Sound Power Level L_{wa} indoors		dB	44	46	47	49	50	52
Specific precautions for assembly, installation and maintenance			All specific precautions for installation, assembly and maintenance are described in the installation and service manual.					

2. PACKAGE LABEL CALCULATIONS

2. Package fiche for boilers indicating the space heating energy efficiency of the package

2.1 Package Fiche-Boilers

Seasonal space heating energy efficiency of boiler

'I' : The value of the seasonal space heating energy efficiency of the preferential space heater, expressed in %.

①

'I'

 %

Temperature Control

from fiche of temperature control

Class I = 1%, Class II = 2%, Class III = 1.5%,
 Class IV = 2%, Class V = 3%, Class VI = 4%,
 Class VII = 3.5%, Class VIII = 5%

②

+

 %

Supplementary boiler

from fiche of boiler

Seasonal space heating energy efficiency (in %)

③

$$(\text{ } - 'I') \times 0.1 = \pm$$
 %

Solar Contribution

from fiche of solar device

Collector size (in m²)

 ('III' x +

Tank Volume (in m³)

 'IV' x) x 0.9 x (

Collector efficiency (in %)

 /100 x

Tank rating

A* = 0,95, A = 0,91,
B = 0,86, C = 0,83, D - G = 0,81

④

$$= +$$
 %

'III' : The value of the mathematical expression : 294/(11.Prated), whereby 'Prated' is related to the preferential space heater.
 'IV' : The value of the mathematical expression : 115/(11.Prated), whereby 'Prated' is related to the preferential space heater.

(1) If tank rating is above A, use 0.95

Supplementary Heat Pump

from fiche of heat pump

'II' : The factor for weighting the heat output of preferential and supplementary heaters of a package as set out in the following table.

Seasonal space heating energy efficiency (in %)

⑤

$$(\text{ } - 'I') \times 'II' =$$
 %

Solar contribution and Supplementary heat pump

select smaller value

④

$$0,5 \times$$

OR

⑤

$$0,5 \times$$

⑥

$$= -$$
 %

Seasonal space heating energy efficiency class of package

⑦

 %

Seasonal space heating energy efficiency class of package

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
G	F	E	D	C	B	A	A'	A''	A'''
<30%	≥30%	≥34%	≥36%	≥75%	≥82%	≥90%	≥98%	≥125%	≥150%

The energy efficiency of the package of products provided for in this fiche may not correspond to its actual energy efficiency once installed in a building, as this efficiency is influenced by further factors such as heat loss in the distribution system and the dimensioning of the products in relation to building size and characteristics.

Boiler and supplementary heat pump installed with low temperature heat emitters at 35°C?

from fiche of heat pump

$$\boxed{\text{7}} + (50 \times \text{'II'}) = \boxed{} \%$$

Weighting of Boilers

$\text{Psup} / (\text{Prated} + \text{Psup})^{(1)(2)}$	II, package without hot water storage tank	II, package with hot water storage tank
0	0	0
0.1	0.3	0.37
0.2	0.55	0.70
0.3	0.75	0.85
0.4	0.85	0.94
0.5	0.95	0.98
0.6	0.98	1
≥ 0.7	1	1

(1) The intermediate values are calculated by linear interpolation between in two adjacent values.
 (2) Prated is related to the preferential space heater or combination heater.

2.2 Package Fiche-Combination Heaters (Boilers or Heat Pumps)

Water heating energy efficiency of combination heater

Declared load profile : ^① %

Solar Contribution

from fiche of solar device

$$(1.1 \times 'I' - 10\%) \times 'II' - 'III' - 'I' = + \sup{②} \text{ \%}$$

Auxiliary electricity

Water heating energy efficiency of package under average climate

^③ %

Water heating energy efficiency class of package under average climate

	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	G	F	E	D	C	B	A	A'	A''	A'''
<input type="checkbox"/> M	<27%	≥27%	≥30%	≥33%	≥36%	≥39%	≥65%	≥100%	≥130%	≥163%
<input type="checkbox"/> L	<27%	≥27%	≥30%	≥34%	≥37%	≥50%	≥75%	≥115%	≥150%	≥188%
<input type="checkbox"/> XL	<27%	≥27%	≥30%	≥35%	≥38%	≥55%	≥80%	≥123%	≥160%	≥200%
<input type="checkbox"/> XXL	<28%	≥28%	≥32%	≥36%	≥40%	≥60%	≥85%	≥131%	≥170%	≥213%

Water heating energy efficiency under colder and warmer climate conditions

Colder : ^③ - 0.2 x ^② = %

Warmer : ^③ + 0.4 x ^② = %

The energy efficiency of the package of products provided for in this fiche may not correspond to its actual energy efficiency once installed in a building, as this efficiency is influenced by further factors such as heat loss in the distribution system and the dimensioning of the products in relation to building size and characteristics.

'I' The value of the water heating energy efficiency of the combination heater, expressed in %.

'II' The value of the mathematical expression $(220 \cdot Q_{ref})/Q_{nonsol}$, where Q_{ref} is taken from Regulation EU 811/2013, Annex VII Table 15 and Q_{nonsol} from the product fiche of the solar device for the declared load profile M, L, XL or XXL of the combination heater.

'III' The value of the mathematical expression $(Q_{aux} \cdot 2.5)/(220 \cdot Q_{ref})$, expressed in %, where Q_{aux} is taken from the product fiche of the solar device and Q_{ref} from Regulation EU 811/2013, Annex VII Table 15 for the declared load profile M, L, XL or XXL.



EMAS MAKİNE SANAYİ A.Ş.

AT UYGUNLUK BEYANI DECLARATION OF CONFORMITY

ÜRETİCİ
MANUFACTURER

EMAS MAKİNE SANAYİ A.Ş.

Organize Sanayi Bölgesi 3. Kısım Mustafa Kemal Bulvarı No: 13 45030 MANİSA
Tel: +90 236 213 00 21 Faks: +90 236 213 08 59 satis@emas.com.tr

ONAYLANMIŞ KURULUŞ:
NOTIFIED BODY

0085-DVGW CERT GmbH DBI
Gastechnologisches Institut Ggmbh Freiberg

ÜRÜN ADI
PRODUCT NAME

ECA Yoğuşmalı Kombiler
ECA Condensing Gas Boilers

İNCELENMİŞ TIPLER
TYPE EXAMINATION

CONFEO PREMIX 14-20-24-28-30-35 HM-HCH-HST DG
CONFEO PREMIX 14-20-24-28-30-35 HM-HCH-HST LPG

2016/426/AB GAR Gaz Yakan Cihazlar Regülasyonu / EU Regulation on Appliances Burning Gaseous Fuels: 2016/426/EU, EN 15502-2-1

Belirli Gerilim Sınırları için Tasarlanan Elektrikli Ekipman ile ilgili Yönetmelik (2014/35/AB) / Low Voltage Directive 2015/35/EU

EN60335-1, EN 60335-2-102

Elektromanyetik Uyumluluk Yönetmeliği 2014/30/AB / EMC Directive 2014/30/EU

EN 55014-1, EN 55014-2, 61003-2, 61003-3, 61000-4-2, 61000-4-3, 61000-4-4, 61000-4-5, 61000-4-6, 61000-4-11

92/42/AT -Sıvı ve Gaz YakıtlıYeni Sıcak Su Kazanlarının Verimlilik Gereklere Dair Yönetmelik / Directive 92/42/EEC on efficiency requirements for new hot-water boilers fired with liquid or gaseous fuels

Aşağıda imzası bulunan şirketimiz yukarıda adı, tipi ve modeli belirlenen cihazları, ekte yer alan B 20/02/3180 EU numaralı rapor dahilinde ilgili standartlara, AT Gaz Yakan Cihazlar ve AT Sıcak Su Kazanlarının Verimlilik Yönetmeliklerine uygun olarak tasarlayıp ürettiğini beyan eder.

The undersigned company certifies under its sole responsibility that the item of equipment specified above has been designed, manufactured, inspected and tested as required by the relevant provisions of the EC Gas Appliances Directive and the EC Boiler Efficiency Directive based on the enclosed pages of the EC type examination report No: B 20/02/3180 EU

Yetkili olmayan kişiler tarafından yapılan değişiklikler ya da uygun olmayan kullanma şekilleri bu beyanı geçersiz kılar. / Any unauthorised changes to the supplied products and/or any improper use invalidates this declaration of conformity.

Üretici Adına imzalayanlar:

Signed On Behalf Of The Manufacturer

İsim (Name)
Görevi (Position)

Ali YURTERİ
Kalite Sistemleri Müdürü
Quality Assurance Manager

Emek DOĞAN
Genel Müdür Yardımcısı
Vice General Manager

SELLER COMPANY

Title: Invoice Date and No:
Address : Delivery Date and Place:
.....
Tel - Fax : Date, Signature and Stamp

PRODUCT'S

Type: Gas-Fired Boiler Serial Number:
Brand: E.C.A. Delivery Date and Place:
Model: Maximum Repair Time: 20 Business Days
..... Warranty Period:

AUTHORIZED SERVICE

Title: Installation Date:
Address :
..... Date, Signature and Stamp
Tel - Fax :

PRODUCTION

Organize Sanayi Bolgesi 3.Kisim
Mustafa Kemal Bulvari No:13 45030 MANISA
Tel.:+90 236 213 00 21
Fax:+90 236 213 08 59
email:emas@emas.com.tr www.emas.com.tr

7006991707-3.0

